



Maintenance

Adhesive residues are easy to remove with acetone.

Spare parts list

Part	Description
1	Application plate
3	Plastic side
4	Serrated blade
9	Application roll
11	Plate spring for return stop
12	Handle
13	Return stop
31	Screw
32	Covering plate
33	Screw
34	Stud
35	Screw
36	Sphere
37	Bushing
38	Tape drum
39	Friction pad
40	Friction washer
41	Spring
42	Thumb nut
43	Screw

Service

For spare parts and repairs of tesa dispenser, please contact:

B & K Apparatebau
KNECHT GmbH
Neustrasse 19
DE-56348 Weisel

Tel. 0049 6774 1217
Fax 0049 6774 1438
ref. Mr. Handschuh